
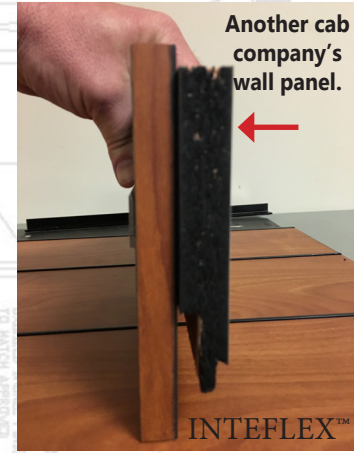


We placed a competitor's wall panel on top of our wall panel and realized that you can't tell much of a difference from a picture.

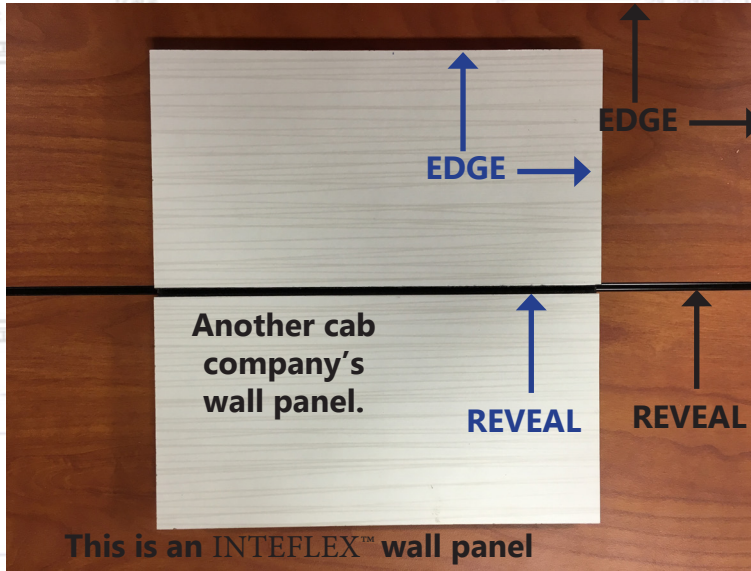

Painted Edges -VS- Banded Edges

Both look great in a picture.

Banded edges add strength to wall panels.

Painted edges allow moisture into the wall panel and allow wall panels to be damaged during install.

Painted edges can allow the wall panel to warp.

Banded edges maintain panel integrity.



Painted Reveals -VS- Powder Coated Aluminum

An INTEFLEX™ wall panel

Both look great in a picture.

INTEFLEX™ powder coated aluminum tees and angles don't just look good, they provide integral support for the wall panel system and assist in the quick install of our elevator cab interiors.

Painted reveals, well they're painted and look good in a picture....



What would you rather do?

Secure wall panel to cab wall with a screw that goes through this hole in particle board.



An INTEFLEX™ wall panel
Secure wall panel to cab wall with screws that go through aluminum tees and angles that are firmly attached to wall panels.

The Difference is in the Details

When it comes to quality pictures can't tell the complete story. Contact Casey Gunnip @ (315) 254-7793 for a demonstration of the INTEFLEX™ quality difference.